


Hazardous recessed LED Lighting



1. Safety Instructions

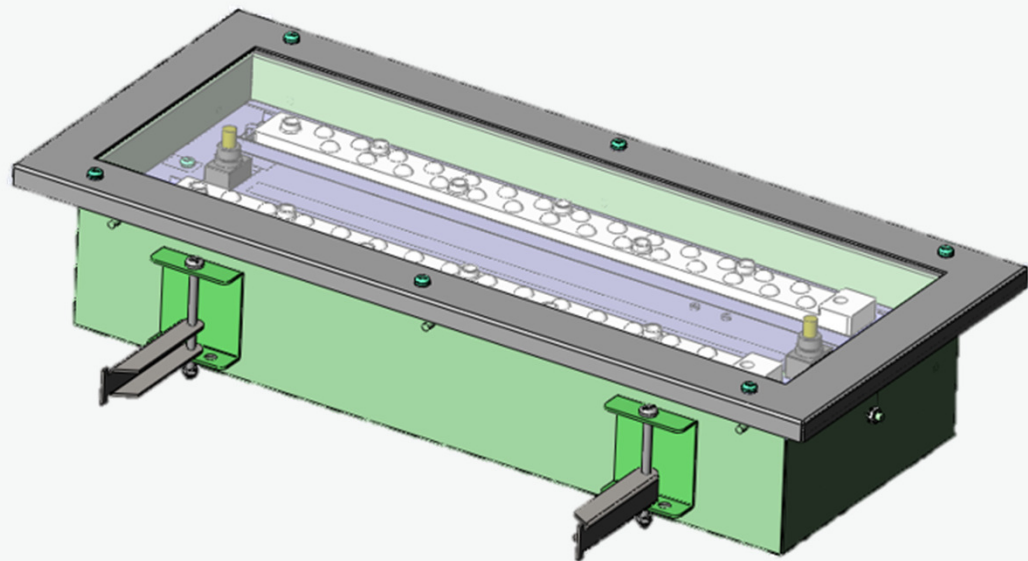

This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with national regulation, including the relevant standard and, where applicable, in acc. With IEC 60079-17 on electrical apparatus for explosive atmospheres.

The national safety rules and regulations for prevention of accidents and the following safety instructions in these operating instructions, will have to be observed!

- ❖ *The luminaire must not be operated in Zone0 and in Zone20!*
- ❖ *When using in Zone21, Zone22, the requirements of IEC/EN 60079-14 relating to temperature must be observed. The indicated surface temperatures are not related to a layers above 5 mm thickness.*
- ❖ *Do not install where the marked operating temperature exceed the ignition temperature of the hazardous atmosphere.*
- ❖ *Do not operate in ambient temperatures above those indicated on the luminaire nameplate.*
- ❖ *The luminaires shall be operated as intended and only in undamaged and perfect conditions! And Keep tightly closed when in operation!*
- ❖ *The technical data indicated on the luminaire are to be observed!*
- ❖ *Change of the design and modifications to the luminaire are not permitted!*
- ❖ *Multiple, short-term switching must be observed!*
- ❖ *Only genuine Eaton Crouse-Hinds spare parts may be used for replacement!*
- ❖ *Repairs that affect the explosion protection, may only be carried out by Eaton Crouse-Hinds or qualified electrician!*
- ❖ *Potential electrostatic risk clean only with a damp cloth*

2. Conformity with standards

This explosion protection floodlight meet the requirements of IEC/EN 60079-0, IEC/EN 60079-1, IEC/EN 60079-7, IEC 60079-11, IEC 60079-18, IEC/EN 60079-31. It also complies with the EC Directives for "Apparatus and protective system for use in explosion atmospheres" (2014/34/EU). It has been designed, manufactured and tested in accordance to the state of the art and according to ISO 9001:2008. The luminaires are suitable for use in explosive atmospheres, Zone1, Zone2 according to IEC60079-10-1 and dust area Zone21 and Zone22 according to IEC60079-10-2.


3. Type and Name

Category of application:

Example Cat No.	HRL	/3060	/00	/30W	/57	/EM2	/1-225	/T1	/S
	1	2	3	4	5	6	7	8	9

1. HRL=Hazardous recessed LED Lighting
2. Indicates Outline
 - /3060=(only for 30W)
 - /3012=(only for 60W)
 - /6060=(only for 60W)
3. Indicates Housing material
 - /00=Galvanized steel with powder coated
 - /16=SS316L with powder coated
4. Indicates lighting power
 - /30w=30w
 - /60w=60w
5. Indicates LED color temperature
 - /30=3000K
 - /40=4000K
 - /50=5000K
 - /57=5700K
6. Indicates Emergency durations
 - /Default=Non-Emergency
 - /EM2=1.5H 25% output
 - /EM3=3H, 25% output
7. Indicates entry types and size
 - /1-225=Single ended 2xM25
 - /2-225=Through wiring 4xM25
 - /1-220=Single ended 2xM20
 - /2-220=Through wiring 4xM20
8. Indicates Terminal Type and Size
 - Default=Double Row Terminal
 - /T1=Single Row Terminal
9. Indicated Safety Switch
 - Default=W/O safety switch
 - /S=W/ safety switch

4. Technical data

Hazardous area specification	
Type of protection:	Ex db, eb, ib, mb, tb Dust protected enclosure
IEC Certification Marking:	Ex db eb ib mb op is IIC T6 Gb (EM with Switch) Ex db eb mb op is IIC T6 Gb (Normal with Switch) Ex eb ib mb op is IIC T6 Gb (EM w/o Switch) Ex eb mb op is IIC T6 Gb (Normal w/o Switch) Ex op is tb IIIC T80°C Db (All types)
ATEX Certification Marking:	II2 G Ex db eb mb op is IIC T6 Gb (Normal with Switch) II2 G Ex db eb ib mb op is IIC T6 Gb (EM with Switch)  II2 G Ex eb mb op is IIC T6 Gb (Normal w/o Switch) II2 G Ex eb ib mb op is IIC T6 Gb (EM w/o Switch) II2 D Ex op is tb IIIC T80°C Db (For all types)
Ambient temperature:	-40°C~+55 °C--- Normal Version -25°C~+55 °C--- EM version
Temperature class:	T6
ATEX/IECEx Certificate No.:	SEV 19 ATEX 0101X/ IECEx SEV 19.0001X
Degree of protection:	IP 66 acc. to EN60529/IEC60529
Enclosure specification	
Material of enclosure:	Galvanized steel SS316L
Finish:	Powder Coating
Material of cover:	PC
Mounting bracket:	Stainless steel or Steel painted
Fasteners:	All external fasteners stainless steel
Installation:	Recessing with mounting bracket
Weight:	Refer to Type Configuration.
Entry specification	
Indirect entry: M20 × 1.5 or M25 × 1.5 cable entry.	
Electrical specification	
Wattage:	30W/60W
Voltage:	100 - 240Vac 50/60Hz, 108 - 250Vdc
Lamp:	LED Arrays
Lumen output at emergency	25%
Emergency time	1.5h/3h
CRI:	70
Insulation class:	Acc. to IEC60598
Terminals capacity:	4mm ² Terminal/6mm ² Terminal Solid: 0.5~6mm ² , Flexible: 0.25~4mm ²

5. Fields of Application

The Luminaire with Ex dem protection and IP66 sealing making it suitable for use for potentially explosive atmospheres including ignitable gas and dust applications.

The luminaire is designed for use in Zone1/Zone21 and Zone2/Zone22 hazardous areas in indoors and outdoors in Marine and Wet locations, where moisture, dirt, corrosion, vibration and rough usage may be present. Application ambient temperature is -40°C~+55°C or -25°C~+55°C. Refer to the luminaire nameplate, For specific information, corresponding operating temperature(T-Code).

The enclosure materials used, including any external metal parts, are High quality materials that ensure a corrosion resistance and resistance to chemical substances according to the requirements for use in a "normal" industrial atmosphere. In case of use in an extremely aggressive atmospheres, please refer to manufacture.

6. Installation

6.1 General

The respective national regulations IEC/EN 60079-14 as well as the general rules of engineering which apply to the installation and operation of explosion protected apparatus will have to be observed! The improper installation and operation may result in the explosion protection and invalidation of the guarantee.

6.2 Mounting luminaire

6.2.1 Mounting the bracket

Only use the accompanying mounting bracket! Securely fasten the mounting bracket to a suitable base with sufficient load-bearing capacity. The mounting should be secured with M6 bolts and relative lock washers, nuts should be used.

The minimum distance between the luminaire and illuminated surface, directly in front of the luminaire, is 0.5 meter. The lamp must not be illuminated when at a distance of less than 0.5m from inflammable material

6.3 Cable entries/Plugs and Breathing valve

The "Increased safety (Exe)" properties must be preserved when select and mount cable entry/plug and breathing valve. Unused holes must be closed with certified plug to establish the Exe protection category. The cable glands/plugs and breathing valve should be Ex tb certified if the whole product is Ex tb certified also. **Cable entries sealing washer(if required by manual of cable gland/plug) must be used to obtain IP66.**

The authoritative mounting guidelines for the cable glands and breathing valve used must be observed. Mounting the selected cable entries acc. type and dimensions of the main connection cable following their manufacturer instructions. The cable temperatures are given as the rise over the max. rated ambient (Tamb). This allows the user to adjust the cable specification for actual maximum site ambient. Only heat resistant cable according to the data on the type label may be used! The max. conductor size is 6mm². The standard looping cable size is 4mm².

6.4 Opening/closing the luminaire

6.4.1 General

The opening of luminaire always shall be without voltage! All gasket seals must be clean and undamaged before closing the luminaire. Make sure the luminaires is well closed before operation!

6.4.2 Exe chamber cover

Open the cover with PC cover. And carry out the steps in reverse order to close the luminaire. Check all screws to ensure a secure fit during operation .

6.5 Electrical connection

The electrical connection of the lamp must only be established by qualified electricians.

Make sure the supply voltage is the same as the luminaire voltage! Use proper supply wiring as specified on the nameplate of the luminaire and in this instructions! Excessive tightening may affect or damage the connection.

6.5.1 Wire connection

The conductors shall be connected with special care in order to maintain the explosion category.

The conductor itself shall not be damaged.

The connectible min. and max. conductor cross-sections shall be observed (see technical data). All terminals, used and unused, shall be fully tightened to prevent incorrect selection between 1.2Nm for Exe T 6P and 1.5~1.8Nm for MBK. Main connection: See wiring diagram. See Fig.4 for details.

6.6 Emergency light attention:

In mains operation the light fitting is charged by means of constant current output from inverter. Charging takes place via the un-switched external phase L to prevent an interruption, even when the luminaire is switched off.

With regular operation of the light fitting, the charging time is requested to more than 12h. It is suitable for a continuous charge of the battery.

Standard emergency discharge time is 90min for EM2, 180min for EM3. Regularly inspection on battery states. Check if the battery cell is leak is necessary.

6.7 LED indicator for HRL emergency:

- LED is green light when normal work and charging battery;
- LED is flash when discharging;
- LED will not work, when no supply power, or inverter & battery is bad, or battery is full discharged;

7. Putting into operation

Prior to putting the apparatus into operation, the tests specified in the relevant national regulations shall be carried out. Insulation measurements may only be carried out between PE and the external conductor L1 (L2, L3) as well as between PE and N.

- Measurement voltage: Max. 1.5 KV AC

- Measurement current: Max.5 mA

The luminaire may only be operated when closed.

It is generally recommended (see IEC/EN 60079-14) that you ensure the type of protection of the construction is not impaired during installation.

8. Maintenance/Serviceing

8.1 General

The relevant national regulations which apply to the maintenance/servicing of electrical apparatus in explosive atmospheres, shall be observed (EN/IEC 60079-17). The interval between maintenance depends upon the ambient conditions and the hours of operation. The recommendations given within EN/IEC 60079-17 for recurring checks must be observed.

8.2 Checks

The equipment must be de-energised before opening Visual inspection should be carried out at a minimum of 12 monthly intervals and more frequently if conditions are severe, refer to EN/IEC 60079-17. The time between lamp changes could be very infrequent and this is too long a period without inspection.

8.3 Routine Examination

During maintenance, the parts affecting the level of protection must be checked in particular:

- Ensure the lamp is lit when energised and examine the enclosure and glass for any signs of cracks and damage.
- When de-energised and left to cool, there should be no significant sign of internal moisture. If there are signs of water ingress, the luminaire should be opened up, dried out, and any likely ingress points eliminated by re-gasketing, re-greasing or other replacement.
- Check the gasket of pc cover and LED housing for any damage or permanent set and replace as required.
- Terminal, screw glands and blanking plugs for secure fitting.
- To maintain the light output, clean the protective pc cover periodically with a damp cloth or a mild cleaning fluid.
- If this product is used in the combustible dust area, outside of enclosure must be cleaned on a regular basis to prevent accumulation of dust.
- The cable connections should be checked for tightness. The gasket should be checked for cracks or lack of elasticity, and if necessary, replaced.
- Check that mountings are secure and the adjusting bolts are tight.
- If it has been suspected that the luminaire has mechanical damage, a stringent workshop overhaul will be required. Where spares are needed, these must be replaced with factory specified parts.

No modifications should be made without the knowledge and approval of the manufacturer.

Cleaning the joint of housing assy. and pc cover use a damp cloth or a mild cleaning fluid.

9. Repair/Overhaul/Modifications

9.1 General

The national regulations EN/IEC60079-19 have to be observed! Repairs and overhaul may only be carried out with genuine Eaton Crouse-Hinds spare parts.

In the case of battery failure, the battery pack must be replaced as a complete unit from the manufacture.

Before replacing or disassembling individual parts, observe the following: Disconnect the power supply to the equipment before maintenance/repair. Make sure that there is no explosive atmosphere when opening the equipment. See section 8.4 for notes on opening and closing the lamp.

Only use original spare parts. If the luminaire was previously in operation then wait to cool enough before opening. Repairs that affect the explosion protection, may only be carried out by Eaton Crouse-Hinds or a qualified electrician in compliance with the applicable national rules. Modifications to the device or changes to its design are not permitted.


After carrying out repair or overhaul work, ensure that the "Exde" properties have not been affected.

Assistance may also be obtained through Cooper Electronic Technologies (Shanghai) Co., Ltd. Sales Service department, 955 ShengLi Road, Pudong Shanghai 201201 Phone (86) 21-28993943


10. Disposal/Recycling

When the apparatus is disposed of, the respective national regulations on waste disposal will have to be observed.


11.Dimension

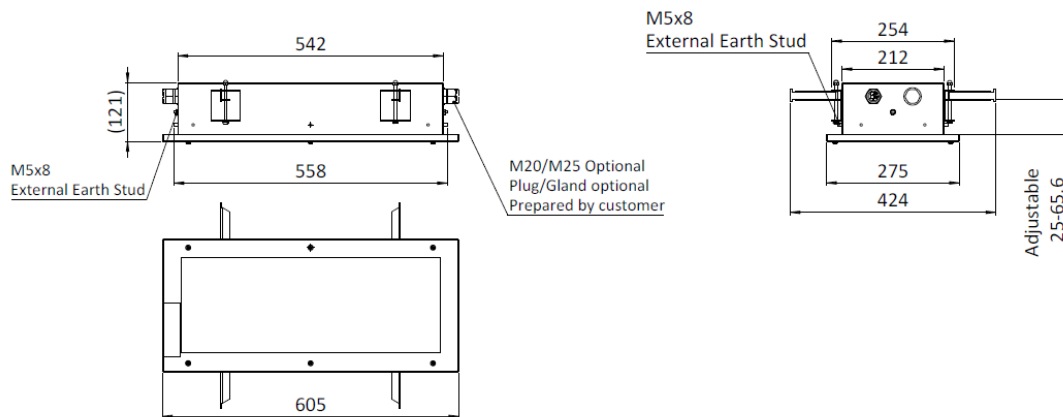

HRL3060**... **

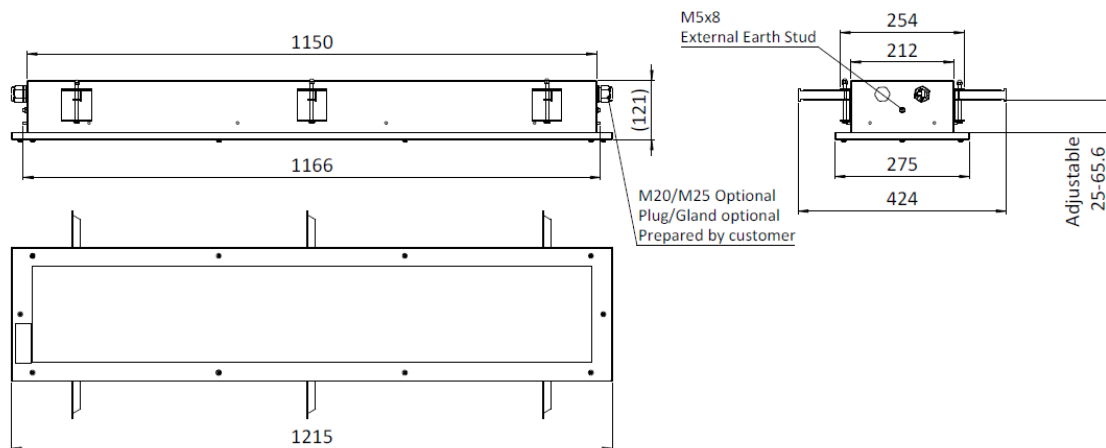


HRL3012**... **

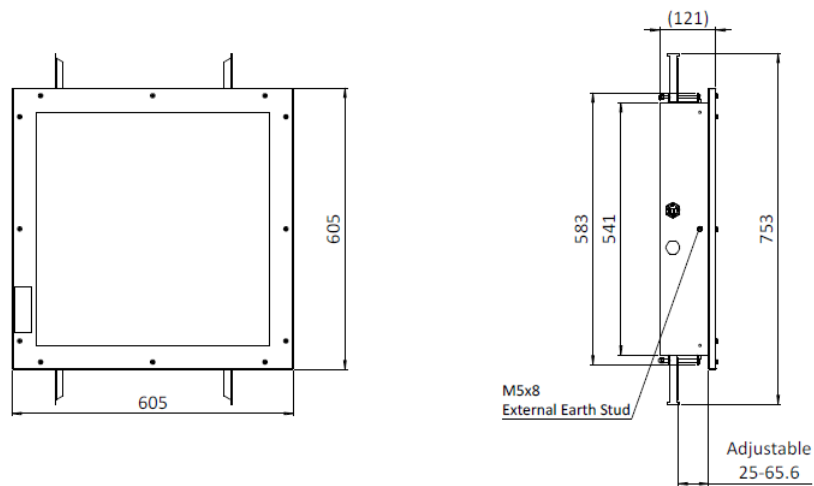


HRL6060**... **


12.Wire diagram

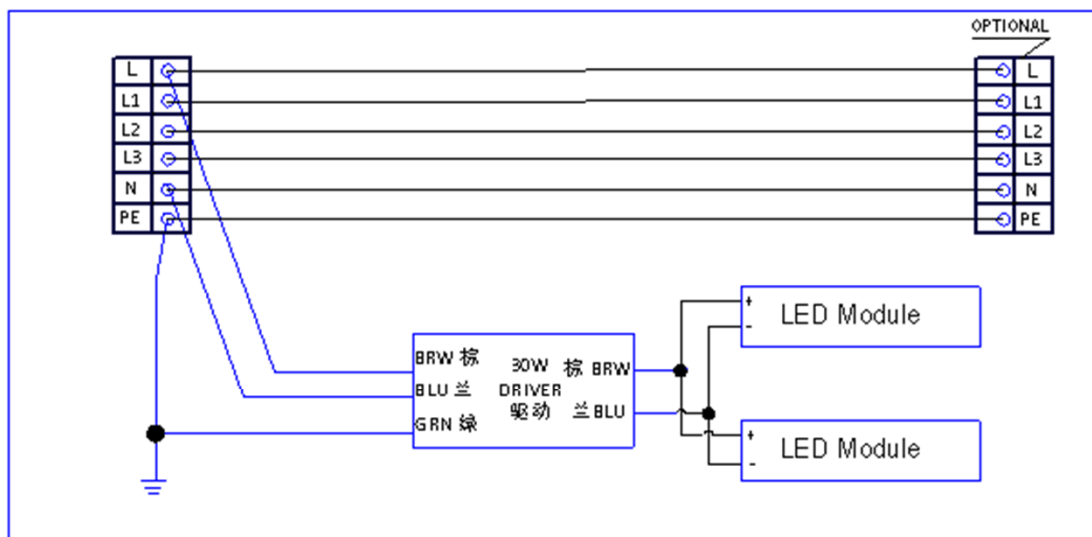


300x600 Normal Version

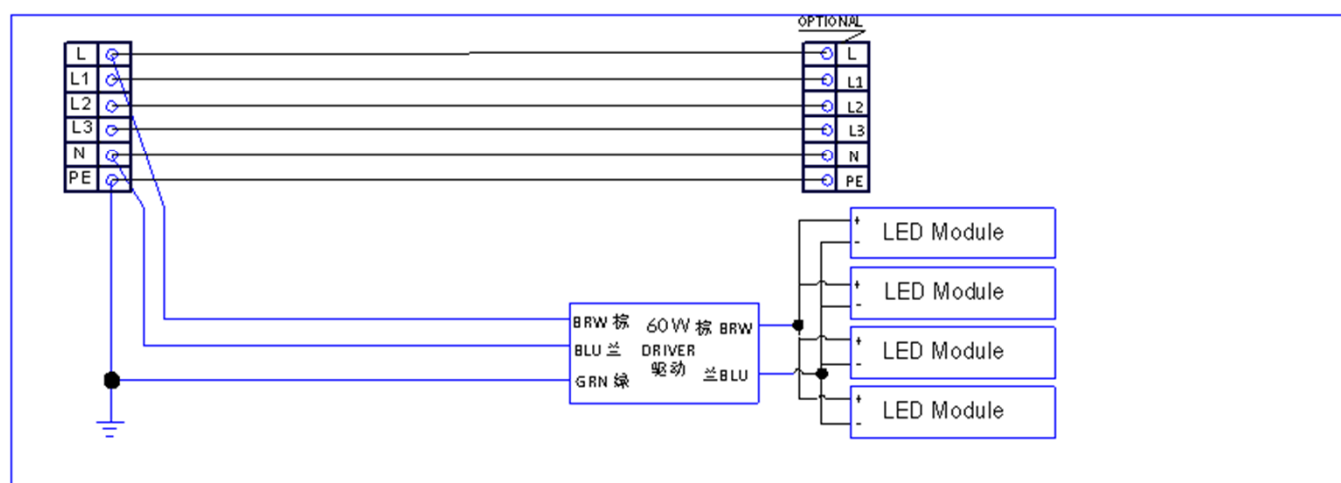

300x1200&600x600 Normal Version

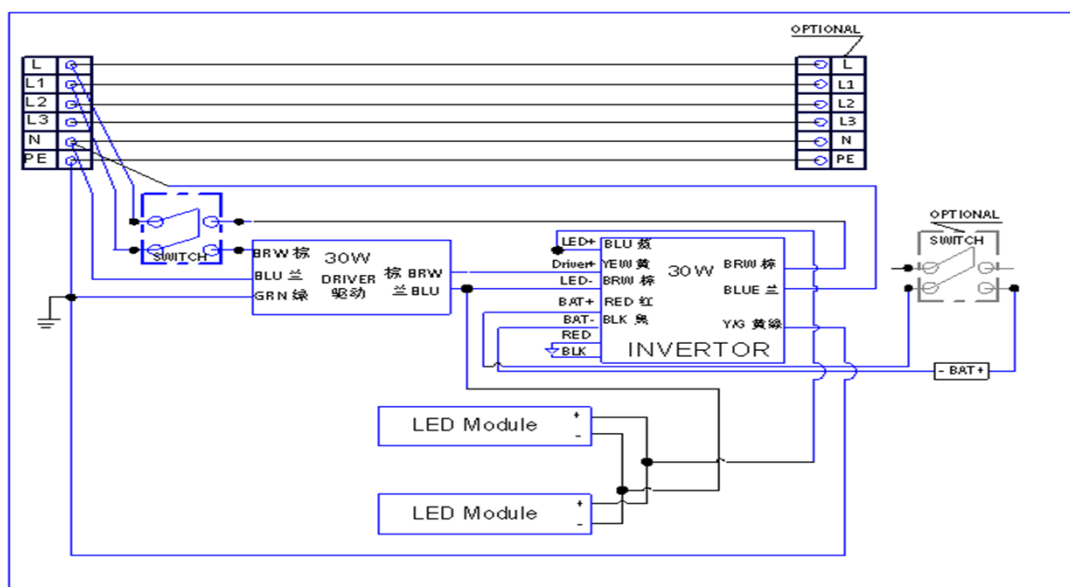



300x600 EM Version

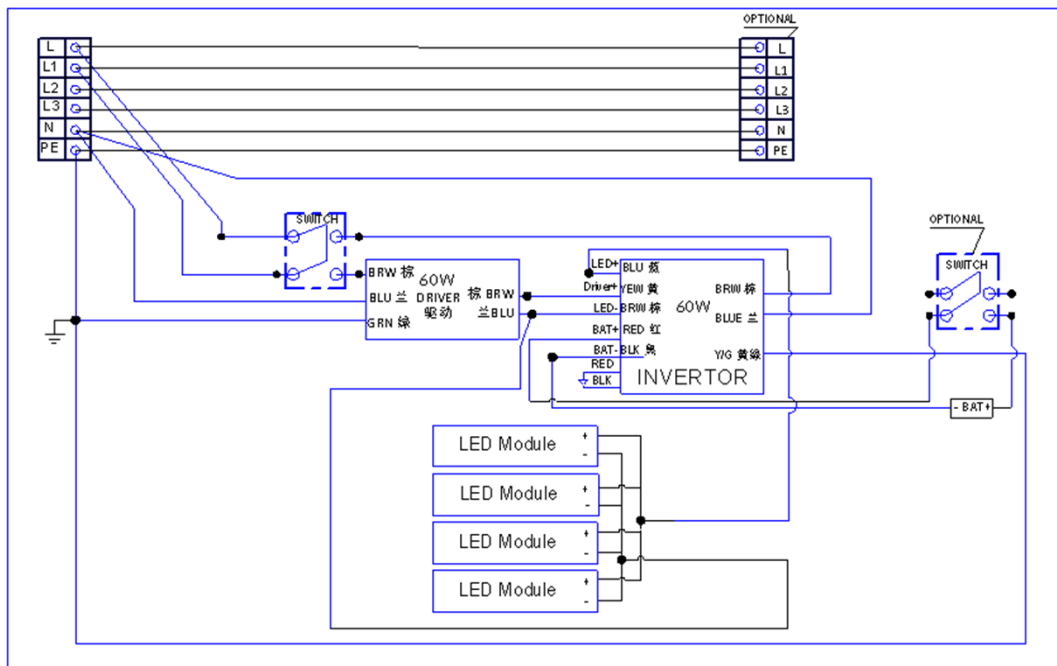


300x1200&600x600 EM Version


13.ILLUSTRATIONS FOR MOUNTING

Continuous ceiling

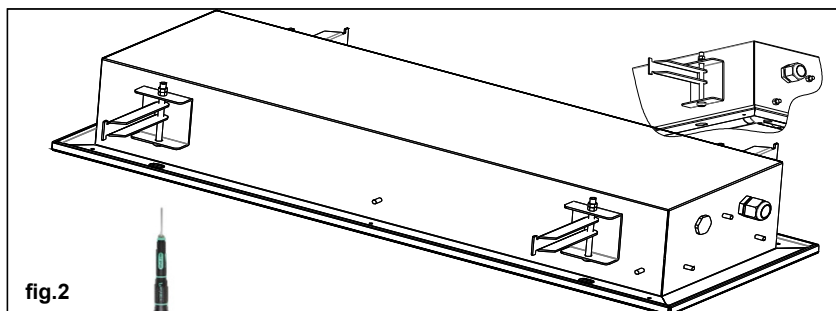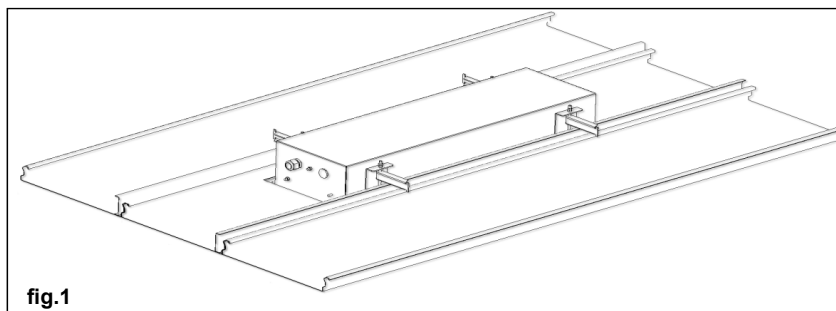

Gap Ceiling

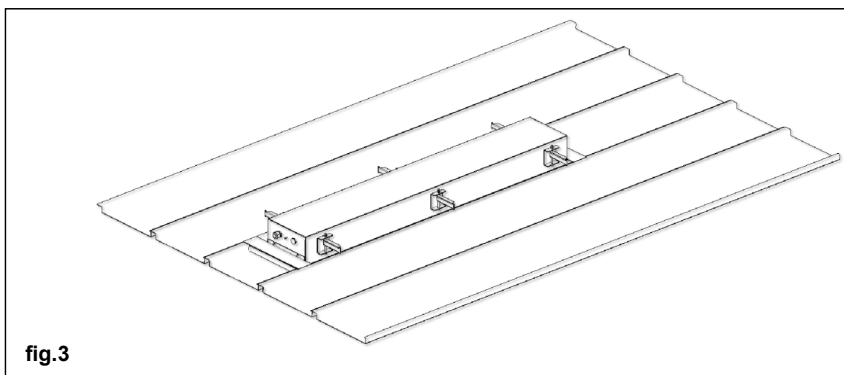

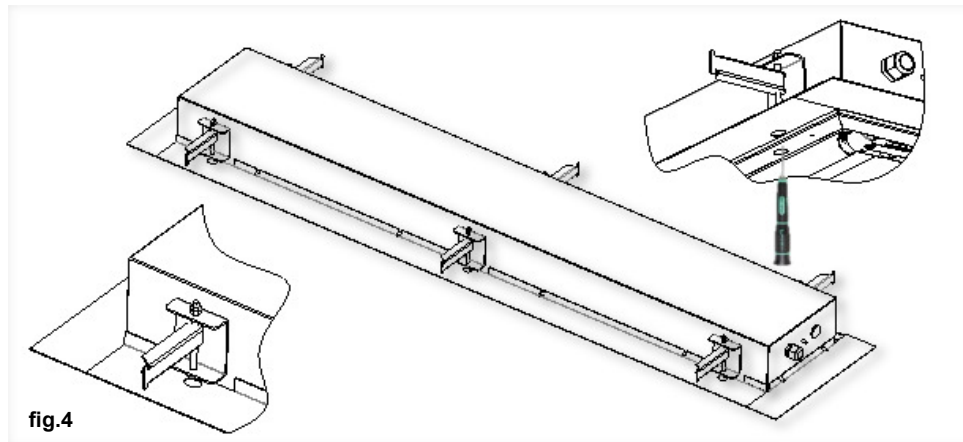

14. Type configuration and Max. Ambient and Temperature Ratings

Std. Cat No.	Color Temp.	Enclosure Outline	System power	LED Qty.	T Class (Gas)	T °C (Dust)	Voltage (V)	Tamb. (°C)	Weight (kg)
HRL/3060/30w/*/*/*/*	3000K	275*605*121	30W	56	T6	80	100-240Vac 50/60Hz 108-250Vdc	-40~+55	8.4
HRL/3060/30w/*/*/EM*/*/*								-25~+55	10.4
HRL/3012/60w/*/*/*/*	4000K	275*1215*121	60W	112				-40~+55	15
HRL/3012/60w/*/*/EM*/*/*	5000K							-25~+55	17
HRL/6060/60w/*/*/*/*	5700K	605*605*121	60W	112				-40~+55	15.5
HRL/6060/60w/*/*/EM*/*/*								-25~+55	17.5

15. Cable gland recommend

Entry size	Part No.	Cable size	Torque (Nm)	
			screw-in enclosure	For cable
M20	CAP816609	8.5-16	20	20
M25	CAP816709	12-21	30	30

Note: Mounting the selected cable glands acc. type and dimensions of the main connection cable. Following their manufacturer instructions.






SEV19ATEX0101X

Wir / We / Nous

**Cooper Electric (Changzhou) Co., Ltd.
No. 189, Liuyanghe Road, Xinbei District,
Changzhou, Jiangsu, 213031
China**

erklären in alleiniger Verantwortung, dass das Produkt
*hereby declare in our sole responsibility, that the product
déclarons de notre seule responsabilité, que le produit*

LED Explosion Protected Luminaire

-  **II 2 G Ex db eb ib mb op is IIC T6 Gb**
-  **II 2 G Ex db eb mb op is IIC T6 Gb**
-  **II 2 G Ex eb ib mb op is IIC T6 Gb**
-  **II 2 G Ex eb mb op is IIC T6 Gb**
-  **II 2 D Ex op is tb IIIC T80°C Db**

HRL Series

den folgenden EU-Richtlinien, den entsprechenden harmonisierten Normen, und weiteren normativen Dokumenten entspricht.
*complies with the following EU directives, their corresponding harmonised standards, and other normative documents.
correspond aux directives européennes suivantes, à leurs normes harmonisées, et aux autres documents normatifs suivants.*

Bestimmungen der Richtlinie
Terms of the directive
Prescription de la directive

Titel und / oder Nr. sowie Ausgabedatum der Norm
Title and / or No. and date of issue of the standard
Titre et / ou No. ainsi que date d'émission des normes:

- 2014/34/EU: Geräte und Schutzsysteme zur bestimmungsgemäßen Verwendung in explosionsgefährdeten Bereichen.
- 2014/34/EU: Equipment and protective systems intended for use in potentially explosive atmospheres.
- 2014/34/UE: Appareils et systèmes de protection destinés à être utilisés en atmosphères explosibles.
- 2014/30/EU: Elektromagnetische Verträglichkeit
- 2014/30/EU: Electromagnetic compatibility
- 2014/30/UE: Compatibilité électromagnétique
- 2011/65/EU: RoHS –Richtlinie
- 2011/65/EU: RoHS – directive
- 2011/65/UE: Directive RoHS

- EN 60079-0:2012+A11:2013**
- EN 60079-1:2014**
- EN 60079-7:2015**
- EN60079-18:2015**
- EN60079-31:2014**
- EN60079-28:2015**
- EN60079-11:2012**
- EN 55015:2013**
- EN 61547:2009**
- EN 61000-3-2:2014**
- EN 61000-3-3:2013**
- EN 61000-6-4:2007+A1:2011**
- EN 61000-6-2:2005**
- EN 50 581: 2012**

Shanghai, 2020.04.20




Ort und Datum
Place and date
Lieu et date

Head of quality department
Franklin Xu

Head of approval office
Joyce ZHANG

⁽¹⁾ Benannte Stelle (EG-Baumusterprüfbescheinigung)
Notified body (EC-type examination certificate)
Organisme notifié (Examen CE de type)

Eurofins Product Testing Italy S.r.l (0477)
Via Cuorgne, 21
10156 Torino-Italia

QAN: Baseefa ATEX 5952

⁽²⁾ Benannte Stelle (Qualitätssicherung Produktion)
Notified body (Production Quality Assurance)
Organisme notifié (Assurance Qualité de Production)

Baseefa LTD (1180)
Rockhead Business Park, Staden Lane,
Buxton, Derbyshire SK17 9RZ

Für den sicheren Betrieb des Betriebsmittels sind die Angaben der zugehörigen Betriebsanleitung zu beachten.
For the safe use of this apparatus, the information given in the accompanying operating instructions must be followed.
Afin d'assurer le bon fonctionnement de nos appareils, prière de respecter les directives du mode d'emploi correspondant à ceux-ci.